


# **ONIKUMA**

## **Panduan Pengguna**

**T308**

\*Harap baca panduan pengguna dengan teliti dan simpan untuk penggunaan di masa mendatang.

## Deskripsi produk

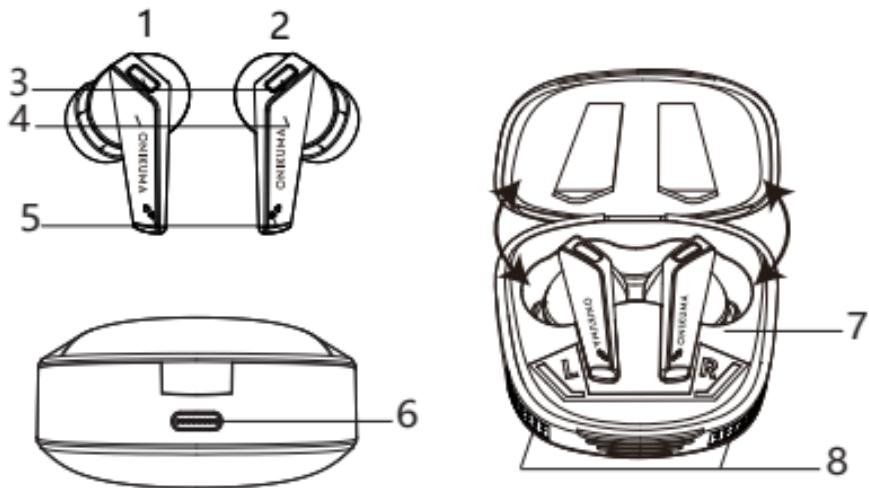

1. Telinga kiri

3. Lampu indikator

5. Lubang mikrofon

7. Wadah pengisi daya

2. Telinga kanan

4. Tombol multifungsi (MFB).

6. Antarmuka pengisi daya Tipe-C

8. Lampu indikator wadah pengisi daya

# Penggunaan

## 1. Cara memakai yang benar

L headset untuk telinga kiri, dan R untuk telinga kanan. Untuk pengalaman audio yang lebih nyaman, silakan coba masing-masing ukuran penutup telinga. Ketika earphone terpasang dengan benar akan terasa nyaman dan aman di telinga anda.



## 2. Penggunaan di luar ruangan

Tubuh manusia mengandung banyak air, yang dapat menimbulkan interferensi kuat terhadap sinyal Bluetooth. Umumnya, earphone diatur untuk menerima sinyal Bluetooth dari ponsel. Disarankan untuk meletakkan ponsel di saku di dekat telinga, yang secara efektif dapat mencegah badan memblokir sinyal dan meningkatkan kemampuan anti gangguan saat digunakan.

# Instruksi

## 1. Pengisian daya produk

- Gunakan pengisi daya DC5V-1A Tipe-C untuk mengisi daya wadah, lampu merah akan berkedip saat mengisi daya, lampu merah akan menyala tanpa kedip saat daya terisi penuh.
- Untuk mengisi daya headset, masukkan headset ke dalam wadah pengisi daya dan tutup, headset akan mengisi daya secara otomatis.

Saat pengisian daya earphone, lampu wadah pengisi daya akan berwarna hijau dan lampu akan mati saat daya earphone penuh.

## 2. Menyambungkan ke peralatan

- Buka penutup wadah pengisi daya, dan kedua earphone akan menyala dan masuk mode menyambungkan secara otomatis.

b. Segarkan perangkat Bluetooth ponsel, temukan T308, pilih untuk menyambungkan

## 3. Koneksi earphone satu sisi

a Metode pemasangan earphone satu sisi sama halnya dengan langkah poin 2 diatas. ( gunakan earphone sisi kiri, keluarkan earphone sisi kiri dari wadah dan tunggu sekitar 10 detik untuk mencari koneksi)

- Menyetel ulang earphone (Setel ulang earphone jika earphone tidak berfungsi dengan baik)
- Ketika Bluetooth tidak terhubung, tekan cepat tombol MFB 5 kali pada earphone, dan akan terdengar nada "dong" setelah menghapus catatan koneksi.

## Kontrol fungsi

Hidupkan daya	Sentuh dan tahan MFB selama 3 detik
Matikan daya	Sentuh dan tahan MFB selama 5 detik
Putar/jeda	Sentuh 2 kali MFB
Volume +	Sentuh 1 kali MFB kanan
Volume -	Sentuh 1 kali MFB kiri
Trek sebelumnya	Sentuh 3 kali MFB sebelah kiri
Trek berikutnya	Sentuh 3 kali MFB sebelah kanan
Jawab/tutup panggilan	Sentuh 1 kali MFB
Tolak panggilan	Sentuh dan tahan MFB 2 detik
Aktifkan asisten suara	Sentuh MBF earphone sebelah kiri 2 kali
Mode game	Sentuh MBF earphone sebelah kanan 2 kali

## Parameter produk

Versi Bluetooth	5.3
Format audio	SBC, AAC
Daya tahan baterai	$\geq 5H$
Pengisian daya (wadah)	$<2H$
Pengisian daya earphone	$<2H$
Jangkauan	$\geq 10m$
Ukuran produk	58.7X52.5X31.4mm

# Pertanyaan yang Sering Diajukan

1. Perangkat tidak dapat mencari bluetooth earphone
  - a. Untuk memastikan apakah earphone telah dihidupkan, harap hidupkan ulang earphone dan perangkat, dan ulangi langkah pencarian bluetooth earphone.
  - b Harap pastikan bahwa earphone tidak terhubung ke perangkat Bluetooth lain.
2. Earphone kiri dan kanan tidak bisa dipasangkan
  - a Masukkan earphone ke dalam wadah pengisi daya dan keluarkan lagi.
  - b Sambungkan kembali setelah menyetel ulang earphone.
3. Ada suara bising dan sambungan terputus antara earphone dan perangkat
  - a Ada penghalang atau gangguan sinyal listrik lainnya antara perangkat dan earphone, harap pastikan tidak ada penghalang antara earphone dan perangkat, dan cobalah untuk tidak menggunakan di lingkungan yang kompleks.
  - b. Rentang jangkauan efektif earphone dan perangkat/ponsel umumnya dapat mencapai 8 meter. Secara umum, efek terbaik dapat dicapai tanpa penghalang, dan kebisingan, koneksi akan terputus jika jarak jangkauan terlampaui.
4. Headset tidak mengisi daya.
  - a. Harap pastikan sambungan antara earphone dan wadah pengisi daya terpasang dengan baik.
  - b. Jika ada kotoran atau noda air pada titik kontak pengisian daya, harap bersihkan.



# ONIKUMA

## MANUAL

T308

\*Please read the manual carefully and keep it for future use.

## Descriptions

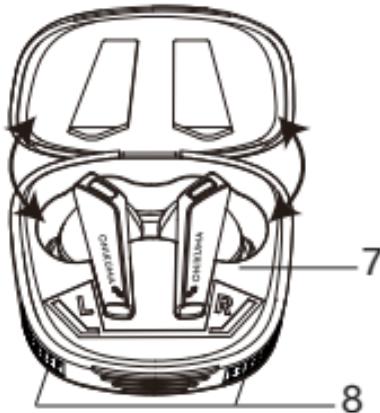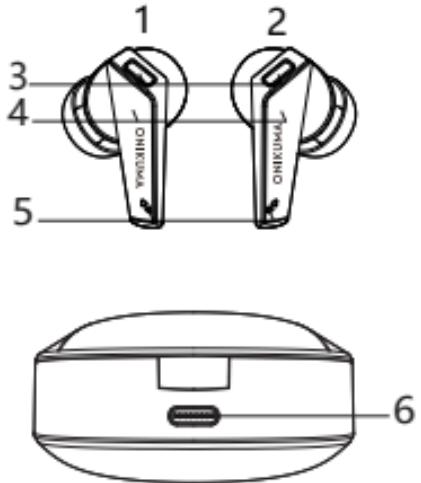

1. Left ear

2. Right ear

3. Earpiece indicator light

4. Multi-function button (MFB)

5. Microphone hole

6. Type-C port

7. Charging case

8. Charging case indicator light

# Wearing

## 1. The correct way to wear

L is the left ear, and R is the right ear. For a more comfortable audio experience, please try on each size of ear tips. Try wear the earphone correctly so that the earphones are closely and firmly seated in your ears.

## 2. Outdoor

The human body contains a lot of water and has strong interference to Bluetooth signals. Generally, the main earphone is set to receive the Bluetooth signal of the mobile phone. It is recommended that try to put the mobile phone in the pocket on the side of the main ear to effectively prevent the human body from blocking the signal and to improve the anti-interference ability during using



# Instructions

## 1. Charging

a. To charge the charging case, please use a Type-C charger with DC5V-1A output. The indicator light on the case will blink red when charging, and stay solid red when fully charged.

b. To charge the earbuds, please put the earbuds into the case and close the cover of the case. The earphones will be charged automatically;

The charging case charges the earphone. The indicator light of the charging case is steady green, and the full light is off.

## 2. Connect the Equipment

a. After opening the lid of the charging case, the left and right earphones are automatically turned on and paired.

b. Refresh the bluetooth device and search for T308. Then click to connect successfully.

## 3. Single Ear Connects the Equipment

a. The method of single earphone pairing is the same as the point 2. (Use the left ear alone, take out the left earphone and wait for about 10S to search for connection)

## 4. Reset The Earphones (When the earphones cannot work normally)

a. When the headset is not connected to the Bluetooth device, press the MFB touch button five times quickly and hear the "dong" prompt sound to complete the reset.

## Function control

Power On	Press and hold the MFB button for 3S
Power Off	Press and hold the MFB button for 5S
Pause/Play	Double tap the MFB key
Volume +	Click the right ear MFB button
Volume -	Click the left ear MFB button
Previous Track	Triple-tap the left earbud MFB button
Next Track	Triple-tap the left earbud MFB button
Answer/Hang Up	Single-tap the MFB button
Reject	Press and hold the <b>MFB</b> button for 2S
Active Voice Mode	Press and hold the left earbud MFB button for 2 seconds
Game Mode	Press and hold the right earbud MFB button for 2 seconds

## Product Parameter

Bluetooth version	5.3
Audio Formats	SBC、AAC
Working time	≥5H
Charging time (box)	<2H
Charging time (headphone)	<2H
Working distance	≥10m
Product size	58.7X52.5X31.4mm

# Frequently Asked Questions

1. The earphone cannot be detected by the mobile
  - a. To determine whether the headset is turned on, restart the earphone and mobile phone, and repeat the above actions to search.
  - b. To make sure that the headset is not connected to other Bluetooth devices.
2. The left and right earphones cannot be paired
  - a. Put the earphone into the charging box and then take out to reconnection.
  - b. Reconnect the headset after resetting it.
3. There is disconnections or noises in the connection between the earphone and the mobile phone
  - a. There are obstacles or other electrical signal interferences between the device and the earphone. Please keep the earphone and the device free of obstacles, and try not to use it in a complex environment.
  - b. The effective working range of earphones and equipment is up to 8 meters. Generally, the situation without obstacles can achieve the best results. There will be noises and disconnections beyond the effective distance.
4. The headphone cannot be charged.
  - a. Please make sure that the headset is connected with the charging box.
  - b. To make sure whether there are dirts or water stains on the charging contact point. Please keep it clean.